









Peter von Buelow University of Michigan, TCAUP Slide 1 of 56

Connection Behavior

Strength


transmits load

Ductility /

- gives warning
- absorbs energy

Design


- size
- number
- slenderness of fastener -
- spacing ~
- · end distance

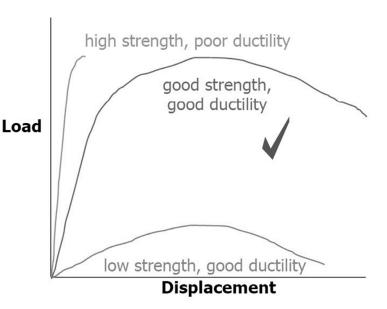

Connection Behavior

Nails

- low strength
- high ductility

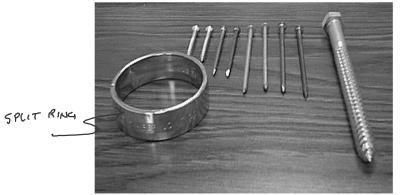


Bolts

- · high strength
- · low ductility

Performance = strength + ductility

RIVETS

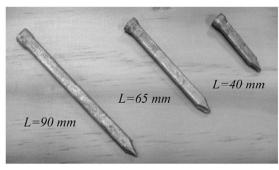



Peter von Buelow University of Michigan, TCAUP Slide 3 of 56

Connection Behavior

Wood Strength

- high parallel to grain
- low across the grain

End support is good







Connection Behavior

Spread the load on wood

- one large fastener bad
- several small fasteners good

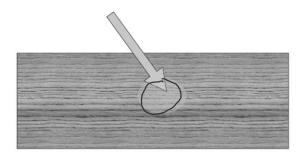

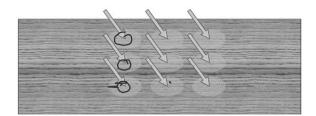

Peter von Buelow University of Michigan, TCAUP Slide 5 of 56

Connection Behavior

Single connector

- · concentrates load
- splits wood or crush
- no redundancy

Multi-connectors

- spreads load
- less splitting
- more redundancy








Peter von Buelow University of Michigan, TCAUP Slide 6 of 56

Connection Behavior

Connectors that spread load

Hanger hardware

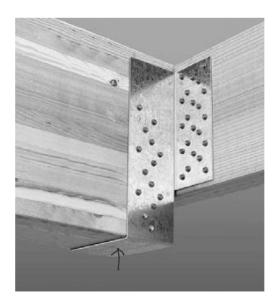




Peter von Buelow University of Michigan, TCAUP Slide 7 of 56

Connection Behavior

Truss gusset plate connectors

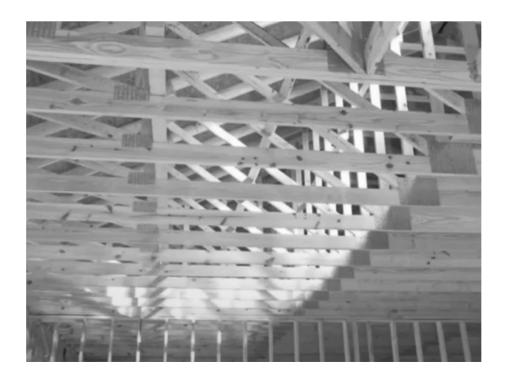

NDS 2018

Chapter 11 (general overview) FL CTOLS


Chapter 12 ★ (nails, screws, bolts, and pins)


Chapter 13 (split ring & shear plate)

Chapter 14 (timber rivets)





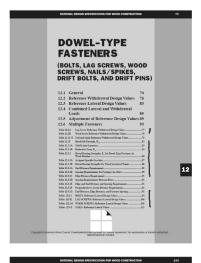

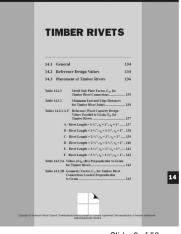

Peter von Buelow

service factors

University of Michigan, TCAUP

Slide 9 of 56

NDS 2018 - Chapter 11

		ASD Only		ASD and LRFD									RFD Only	
		Load Duration Factor 1	Wet Service Factor	Temperature Factor	Group Action Factor	Geometry Factor ³	Penetration Depth Factor ³	End Grain Factor 3	Metal Side Plate Factor 3	[§] Diaphragm Factor ³	Toe-Nail Factor 3	K Format Conversion Factor	Ф Resistance Factor	Time Effect Factor
			Lat	eral I	oads									7 - 7
Dowel-type Fasteners (e.g. bolts, lag screws, wood screws, nails, spikes, drift bolts, & drift pins)	z' = z x	CD	C_{M}	Ct	Cg	C_{Δ}	-	C_{eg}	147	Cdi	Cm	3.32	0.65	λ
Split Ring and Shear Plate Connectors	P = P x Q = Q x	C_D	C _M	C _t	C _g	C_{Δ} C_{Δ}	C _d	-	C _{st}	2	101		0.65	
Timber Rivets	P = P x Q = Q x	C _D	C _M	C _t	-	- C _Δ ⁵	-	12	C _{st} ⁴ C _{st}	-	121	3.32	0.65 0.65	λ
Spike Grids	Z' = Z x	CD	C_{M}	Ct	-	C_{Δ}	73	-	1-11	-	1-	3.32	0.65	λ
			Withd	lrawa	l Loa	ds								
Nails, spikes, lag screws, wood screws, & drift pins	W' = W x	C_{D}	$C_{\rm M}^{\ \ 2}$	Ct	(67)	-	15	C_{eg}	10)	ē	Cm	3.32	0.65	λ
				l-Thr	ough									
Fasteners with Round Heads	$W_H = W_H x$	C_{D}	Č _M	C_{t}	-	-		-	8500		-	3.32	0.65	λ

The load duration factor, C_D, shall not exceed 1.6 for connections (see 11.3.2).

The west service factor, C₀, shall not exceed 1.0 for connections (see 11.3.2).
 The west service factor, C_M, shall not apply to toe-nails loaded in withdrawal (see 12.5.4.1).
 Specific information concerning geometry factors C₃, penetration depth factors C₆, end grain factors, C_m, metal side plate factors, C_m, diaphragm factors, C_{dis} and toe-nail factors, C_m, is provided in Chapters 12, 13, and 14.
 The metal side plate factor, C_m, is only applied when rivet capacity (P_r, Q_r) controls (see Chapter 14).
 The geometry factor, C_{dis} is only applied when wood capacity, Q_m, controls (see Chapter 14).

service factors

- C^{D}
- C_t

11.3.2 Load Duration Factor, CD (ASD Only)

Reference design values shall be multiplied by the load duration factors, C_D ≤ 1.6, specified in 2.3.2 and Appendix B, except when the capacity of the connection is controlled by metal strength or strength of concrete/masonry (see 11.2.3, 11.2.4, and Appendix B.3). The impact load duration factor shall not apply to con-

11.3.4 Temperature Factor, Ct

Reference design values shall be multiplied by the temperature factors, Ct, in Table 11.3.4 for connections that will experience sustained exposure to elevated temperatures up to 150°F (see Appendix C).

Table 11.3.4 Temperature Factors, Ct, for Connections

In-Service Moisture		c_t	
	T≤ <u>10</u> 0°F	100° <u>F</u> <t≤125°f< th=""><th>125°F<t≤150°f< th=""></t≤150°f<></th></t≤125°f<>	125°F <t≤150°f< th=""></t≤150°f<>
Dry	1.0	0.8 .	0.7
Wet	1.0	0.7	0.5

^{1.} Wet and dry service conditions for connections are specified in 11.3.3.

Peter von Buelow University of Michigan, TCAUP Slide 11 of 56

NDS 2018 - Chapter 11

service factors

 C_M

Table 11.3.3 Wet Service Factors, C_M, for Connections

2010 120	Moisture Co	ontent	
Fastener Type	At <u>Time of Fabrication</u>	In-Service	$C_{\mathbf{M}}$
	Lateral Lo	oads	
Split Ring and Shear Plate Connectors ¹	≤ 19% > 19% any	≤ 19% ≤ 19% > 19%	1.0 0.8 0.7
Dowel-type Fasteners (e.g. bolts, lag screws, wood screws, nails, spikes, drift bolts, & drift pins)	≤ 19% PAY > 19% WCT any	≤ 19% ₹7 ≤ 19% ₹₹ > 19% ₹₹	1.0 0 0.42 0.7
Timber Rivets	≤ 19% ≤ 19%	≤ 19% > 19%	1.0 0.8
	Withdrawal	Loads	
Lag Screws & Wood Screws	any any	≤ 19% > 19%	1.0 0.7
Nails & Spikes ³	≤ 19% > 19% ≤ 19% > 19%	≤ 19% ≤ 19% > 19% > 19%	1.0 0.25 ³ 0.25 ³ 1.0
	Pull-Through	Loads	
Fasteners with Round Heads	any any	≤ 19% > 19%	1.0 0.7

^{1.} For split ring or shear plate connectors, moisture content limitations apply to a depth of 3/4" below the surface of the wood.

C_M = 0.7 for dowel-type fasteners with diameter, D, less than 1/4".
 C_M = 1.0 for dowel-type fastener connections with:


¹⁾ one fastener only, or

two or more fasteness placed in a single row parallel to grain, or
 fasteness placed in two or more rows parallel to grain with separate splice plates for each row.
 For Roof Sheathing Ring Shank (RSRS) and Post-Frame Ring Shank (PF) nails, C_M=1.0.

WET SERVICE FACTOR, C_M

service factors

- C_{M}
- Dowel type connectors

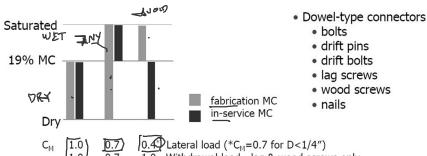


 wood screws nails

bolts drift pins

 drift bolts lag screws

0.7 1.0 Withdrawal load - lag & wood screws only 0.25 0.25 Withdrawal load - nails & spikes

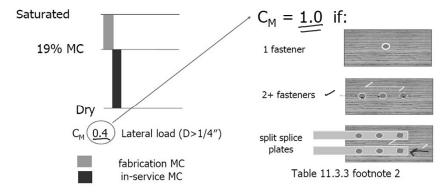

Peter von Buelow University of Michigan, TCAUP

NDS 2018 - Chapter 11

For dowel type fasteners: service factors

- C_q (chap 11) Group Action Factor
- C∆ (chap 12) Geometry Factor
- Ceg (chap 12) End Grain Factor
- Cdi (chap 12) Diaphragm Factor
- Ctn (chap 12) Toe-Nail Factor

11.3.6 Group Action Factors, C_g

11.3.6.1 Reference lateral design values for split ring connectors, shear plate connectors, or dowel-type fasteners with $D \le 1$ " in a row shall be multiplied by the following group action factor, C_g:

$$C_{g} = \left[\frac{m(1 - m^{2n})}{n \left[(1 + R_{EA} m^{n})(1 + m) - 1 + m^{2n} \right]} \right] \left[\frac{1 + R_{EA}}{1 - m} \right]$$
(11.3-1)

Cg = 1 for dowel type fasteners with D < $\frac{1}{4}$ "

Figure 12G **Bolted Connection Geometry**

Slide 13 of 56

Parallel to grain loading in all wood members (Z_{\parallel})

Table 12.5.1A E	ind Distance R	equirements
	End Di	stances }
Direction of Loading	Minimum end distance for $C_{\Delta} = 0.5$	Minimum end distance for $C_A = 1.0$
Perpendicular to Grain	2D-	4D /
Parallel to Grain, Compression: (fastener bearing away from member end)	2D	4D ~
Parallel to Grain, Tension: (fastener bearing to- ward member end) for softwoods for hardwoods	3.5B 2.5D	FOR $V = \frac{1}{2}$

Withdrawal Strength:

- Table 12.2A Lag Screws
- · Table 12.2B Threaded Wood Screws
- Table 12.2C Smooth Nails
- Table 12.2D Smooth Stainless Nails
- Table 12.2E Ring Shank Nails
- Table 12.2F Head Pull-Through

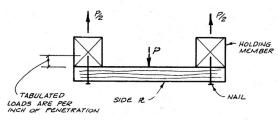
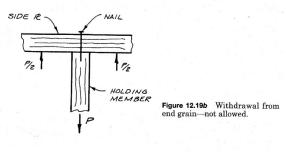


Figure 12.19a Basic withdrawal connection.



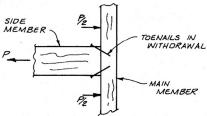


Figure 12.19c Toenail connection withdrawal from side grain.

Peter von Buelow

University of Michigan, TCAUP

Slide 15 of 56

NDS 2018 - Chapter 12

Withdrawal Strength Example


Find the allowable DL capacity (fabricated green – used dry)


For 16d box nails (NDS Appendix L4) D = 0.135 L = 3.5penetration = 3.5 - 1.5 = 2

G = 0.47 (NDS Table 12.3.3A)

Withdrawal, w = 28 LB/IN (Table 12.2C) penetration, p = 2" W = p x w = 2 x 28 = 56 LBS/nail W' = W ($C_D C_M C_t C_{tn}$) = 56(0.9 0.25 1.0 1.0) = 12.6 LBS/nail

Pmax = n W' = 12 x 12.6 = 151 LBS

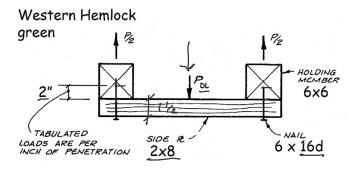

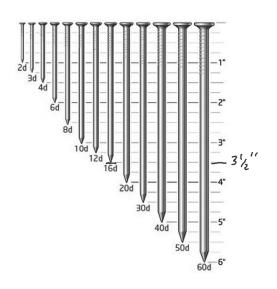

Withdrawal Strength Example


For 16d box nails (NDS Appendix L4)

D = 0.135"

L = 3.5"

penetration = 3.5 - 1.5 = 2"

G = 0.47 (NDS Table 12.3.3A)

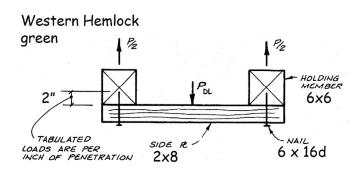

able L4	Stand	ard Cor	nmon, E	Box, and	l Sinker	Steel V	Vire Nai	ils ^{1,2}				
H	↓	L			H	1111	_ L			D = diam L = lengt H = head	,	, in.
	Common o	r Box					Sinker					
						P	ennyweig	ht				
Type		6d	7d	8d	10d	12d	16d	20d	30d	40d	50d	60d
	L	2	2-1/4	2-1/2	3	3-1/4	3-1/2	4	4-1/2	5	5-1/2	6
Common	D	0.113	0.113	0.131	0.148	0.148	0.162	0.192	0.207	0.225	0.244	0.263
	Н	0.266	0.266	0.281	0.312	0.312	0.344	0.406	0.438	0.469	0.5	0.531
	L	2	2-1/4	2-1/2	3	3-1/4	3-1/2	4	4-1/2	5		
Box	D	0.099	0.099	0.113	0.128	0.128	0.135	0.148	0.148	0.162		
	Н	0.266	0.266	0.297	0.312	0.312	0.344	0.375	0.375	0.406		
	L	1-7/8	2-1/8	2-3/8	2-7/8	3-1/8	3-1/4	3-3/4	4-1/4	4-3/4		5-3/4
Sinker	D	0.092	0.099	0.113	0.12	0.135	0.148	0.177	0.192	0.207		0.244
	Н	0.234	0.250	0.266	0.281	0.312	0.344	0.375	0.406	0.438		0.5

Peter von Buelow

University of Michigan, TCAUP

Slide 17 of 56

NDS 2018 - Chapter 12

Withdrawal Strength Example

For 16d box nails (NDS Appendix L4)

G = 0.47 (NDS Table 12.3.3A)

L = 3.5"

D = 0.135"

Withdrawal, w = 28 LB/IN (Table 12.2C)

Tabulate	d withd	rawal d	lesign v	alues, V	V, are i		りい Is per ii	ich of f	astener	penetra	tion in	to side ş	grain of	wood r	nember	(see 12	.2.3.1)	
Specific Gravity ² , G				Sm	ooth Si	nank (B	right or	Galva	nized) (Carbon	Steel N	ail and	Spike D	iamete	r, D			
W 000	0.092"	0.099"	0.113"	0.120"	0.128"	0.131"	0.135"	0.148"	0.162"	0.177"	0.192"	0.207"	0.225"	0.244"	0.263"	0.283"	0.312"	0.375
0.73	58	62	71	75	80	82	85	93	102	111	121	130	141	153	165	178	196	236
0.71	54	58	66	70	75	77	79	87	95	104	113	121	132	143	154	166	183	220
0.68	48	52	59	63	67	69	71	78	85	93	101	109	118	128	138	149	164	197
0.67	47	50	57	61	65	66	68	75	82	90	97	105	114	124	133	144	158	190
0.58	33	35	40	42	45	46	48	52	57	63	68	73	80	86	93	100	110	133
0.55	28	31	35	37	40	41	42	46	50	55	59	64	70	76	81	88	97	110
0.51	24	25	29	31	33	34	35	38	42	45	49	53	58	63	67	73	80	96
0.50	22	24	28	29	31	32	33	36	40	43	47	50	55	60	64	69	76	91
0.49	21	23	26	28	30	30	31 .	34	38	41	45	48	52	57	61	66	72	87
0.47	19	21	24	25	27	27	28	31	34	37	40	43	47	51	55	59	65	78
0.46	18	20	22	24	25	26	27	29	32	35	38	41	45	48	52	56	62	74
0.44	16	18	20	21	23	23	24	26	29	31	34	37	40	43	47	50	55	66
0.43	15	17	19	20	21	22	23	25	27	30	32	35	38	41	44	47	52	63
0.42	15	16	18	19	20	21	21	23	26	28	30	33	35	38	41	45	49	59
0.41	14	15	17	18	19	19	20	22	24	26	29	31	33	36	39	42	46	56
0.40	13	14	16	17	18	18	19	21	23	25	27	29	31	34	37	40	44	52
0.39	12	13	15	16	17	17	18	19	21	23	25	27	29	32	34	37	41	49
0.38	11	12	14	15	16	16	17	18	20	22	24	25	28	30	32	35	38	46
0.37	11	11	13	14	15	15	16	17	19	20	22	24	26	28	30	33	36	43
0.36	10	11	12	13	14	14	14	16	17	19	21	22	24	26	28	30	33	40
0.35	9	10	11	12	13	13	14	15	16	18	19	21	23	24	26	28	31	38
0.31	7	7	8	9	9	10	10	11	12	13	14	15	17	18	19	- 21	23	28

^{2.} Specific gravity shall be determined in accordance with Table 12.3.3A.

^{3.} Tabulated withdrawal design values for smooth shank nails are permitted to be used for deformed shank nails of equivalent diameter, D.

Withdrawal Strength Example

Withdrawal, w = 28 LB/IN (Table 12.2C) penetration, p = 2" $W = p \times w = 2^{x} \times 28 = 56 LBS/nail$ $W' = W (C_D C_M C_t C_{tn})$ = 56(0.9 0.25 1.0 1.0) = 12.6 LBS/nail

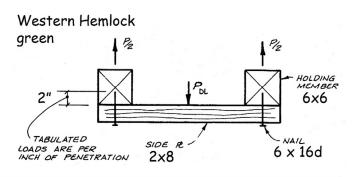


Table 11.3.1 Applica	bility of Ad	justm	ent F	actor	s for	Conr	ectio	ons						
		ASD Only	ASD and LRFD									LRFD Only		
		Load Duration Factor 1	Wet Service Factor	Temperature Factor	Group Action Factor	Geometry Factor ³	Penetration Depth Factor ³	End Grain Factor ³	Metal Side Plate Factor ³	Diaphragm Factor ³	Toe-Nail Factor ³	A Format Conversion Factor	Resistance Factor	Time Effect Eactor
			Lat	eral I	oads									_
Dowel-type Fasteners (e.g. bolts, lag screws, wood screws, nails, spikes, drift bolts, & drift pins)	z' = z x	CD	C_{M}	Ct	C_g	C_{Δ}	-	C_{eg}	-	Cdi	Cm	3.32	0.65	λ
Split Ring and Shear Plate Connectors	P = P x Q = Q x	C _D	C _M	C _t	C _g	C_{Δ} C_{Δ}	C _d	-	C _{st}	-	-		0.65	
Timber Rivets	P = P x Q = Q x	C _D	C _M	C _t	-	- C _Δ ⁵	-	-	Cst 4 Cst 4	-	-	3.32	0.65	λ
Spike Grids	z' = z x	CD	C_{M}	Ct	12	C_{Δ}	E	-	- 1	-	[-]	3.32	0.65	λ
			Witho	lrawa	l Loa	ds								
Nails, spikes, lag screws, wood screws, & drift pins	W' = W x	CD	$C_M^{\ 2}$	Ct		-	-	Ceg	-	-	Cm	3.32	0.65	λ
			Pul	l-Thr	ough									
Fasteners with Round Heads	WH = WHX	C_{D}	$C_{\rm M}$	Ct	-	-	-	-	1.5	-	0.50	3.32	0.65	λ

The load duration factor, C_0 , shall not exceed 1.6 for connections (see 11.3.2). The wet service factor, C_0 , shall not apply to to-enails loaded in withdrawal (see 12.5.4.1). Specific information concerning general patients one by fine-term of the other C_0 , end grain factors and to-enail factors, C_0 , is provided in Chapters 12, 13, and 14. The metal side plate factor, C_0 , is only applied when two capacity (P_0, Q_0) controls (see Chapter 14). The geometry factor, C_0 is only applied when two decapacity, Q_0 , controls (see Chapter 14).

Peter von Buelow

University of Michigan, TCAUP

Slide 19 of 56

NDS 2018 - Chapter 12

Withdrawal Strength Example

Find the allowable DL capacity (fabricated green – used dry)

For 16d box nails (NDS Appendix L4) D = 0.135"

L = 3.5"

penetration = 3.5 - 1.5 = 2"

G = 0.47 (NDS Table 12.3.3A)

Withdrawal, w = 28 LB/IN (Table 12.2C) penetration, p = 2"

W = p x w = 2 x 28 = 56 LBS/nail

 $W' = W (C_D C_M C_t C_{tn})$

= 56(0.9 0.25 1.0 1.0) = 12.6 LBS/nail

Pmax = n W' = 12 x 12.6 = 151 LBS

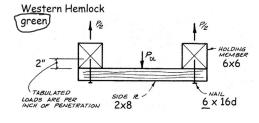


Table 11.3.3	Wet Service	Factors, CM	, for Connections

	Moisture C	ontent		
At Time of Fabrication		In-Service	$C_{\mathbf{M}}$	
	Lateral L	oads		
Split Ring and Shear	≤ 19%	≤ 19%	1.0	
Plate Connectors ¹	> 19%	≤ 19%	0.8	
	any	> 19%	0.7	
Dowel-type Fasteners	≤ 19%	≤ 19%	1.0	
(e.g. bolts, lag screws,	> 19%	≤ 19%	0.4^{2}	
wood screws, nails, spikes, drift bolts, & drift pins)	any	> 19%	0.7	
Timber Rivets	≤ 19%	≤ 19%	1.0	
	≤ 19%	> 19%	0.8	
	Withdrawal	Loads	8	
Lag Screws & Wood	any	≤ 19%	1.0	
Screws	any	> 19%	0.7	
Nails & Spikes³	≤ 19%	≤ 19%	1.0	
	. > 19% WED	≤ 19% PRY -	0.26	
	≤ 19%	> 19%	0.25	
	> 19%	> 19%	1.0	
	Pull-Through	ı Loads		
Fasteners with Round	any	≤ 19%	1.0	
Heads	any	> 19%	0.7	

- For split ring or shear plate connectors, moisture content limitations apply to a depth of x)→ oeto C, C_M = 0.7 for downl-type flateners with diameter, D, less than 1/4".
 One flatener only, or
 You con more flateners placed in a single row parallel to grain, or
 flateners placed in two or more row; parallel to grain with separate splice plates for each row
 For Roof Sheathing Ring Shank (RSRS) and Post-Frame Ring Shank (PF) nails, C_M=1.0.

University of Michigan, TCAUP

NDS 2018 Appendix E

Axial Load Connection

three limit states

· E.2 net tension

E.3 row tear-out

LEGST

E.4 group tear-out



Closely spaced fasteners in group tear-out

Peter von Buelow

Appendix E (Non-mandatory) Local Stresses in Fastener Groups

E.1 General

Where a fastener group is composed of closely spaced fasteners loaded parallel to grain, the capacity of the fastener group may be limited by wood failure at the net section or tear-out around the fasteners caused by local stresses. One method to evaluate member strength for local stresses around fastener groups is outlined in the following procedures.

lined in the following procedures.

E.1.1 Reference design values for timber rivet connections in Chapter 14 account for local stress effects and do not require further modification by procedures outlined in this Appendix.

E.1.2 The capacity of connections with closely spaced, large diameter bolts has been shown to be limited by the capacity of the wood surrounding the connection. Connections with groups of smaller diameter fasteners, such as typical nailed connections in wood-frame construction, may not be limited by wood capacity.

E.2 Net Section Tension Capacity

The adjusted tension capacity is calculated in accordance with provisions of 3.1.2 and 3.8.1 as follows:

$$Z_{NT}' = F_t' A_{net}$$
 (E.2-1

where:

Z_{NT}' = adjusted tension capacity of net section area

Ft' = adjusted tension design value parallel to grain

Anet = net section area per 3.1.2

E.3 Row Tear-Out Capacity

The adjusted tear-out capacity of a row of fasteners can be estimated as follows:

$$Z_{RTI}' = n_i \frac{F_v' A_{critical}}{2}$$
 (E.3-1)

where

ZRTi' = adjusted row tear out capacity of row i

F_v' = adjusted shear design value parallel to grain

A_{critical} = minimum shear area of any fastener in row i

n_i = number of fasteners in row i

Copyright
American Wood Council. Downloaded/printed pursuant to License Agreement. No reproduction or transfer authorized AMERICAN WOOD COUNCIL.

per

serticul = minimum spacing in row i taken as the lesser
of the end distance or the spacing between
fasteners in row i

E3.1 Assuming one shear line on each side of bolts in a row (observed in tests of bolted connections).

 $Z_{RTi}' = \frac{F_v't}{2} [n_i s_{critical}] (2 \text{ shear lines})$

t = thickness of member

Equation E.3-1 becomes:

The total adjusted row tear-out capacity of multiple rows of fasteners can be estimated as:

$$Z_{RT}' = \sum_{i=1}^{n_{ow}} Z_{RTi}'$$
 (E.3-3)

where:

ZRT' = adjusted row tear out capacity of multiple

nrow = number of rows

E 3.2 In Equation E 3-1, it is assumed that the induced shear stress varies from a maximum value of $f_v = F_v$ to a minimum value of $f_v = 0$ along each shear line between fasteners in a row and that the change in shear stress/strain is linear along each shear line. The resulting triangular stress distribution on each shear line between fasteners in a row establishes an apparent shear stress equal to half of the adjusted design shear stress, $F_v/2$, as shown in Equation E.3-1. This assumption is combined with the critical area concept for evaluating stresses in fastener groups and provides good agreement with results from tests of bolted connections. E3.3 Use of the minimum shear area of any fasteners.

er in a row for calculation of row tear-out capacity is based on the assumption that the smallest shear area between fasteners in a row will limit the capacity of the row of fasteners. Limited verification of this approach is provided from tests of bolted connections.

ow i

NDS 2018 Appendix E

Axial Load Connection

three limit states

- E.2 net tension
- E.3 row tear-out
- E.4 group tear-out

E.4 Group Tear-Out Capacity

The adjusted tear-out capacity of a group of "n" rows of fasteners can be estimated as:

$$Z_{GT}' = \frac{Z_{RT-1}'}{2} + \frac{Z_{RT-n}'}{2} + F_t' A_{group-net}$$
 (E.4-1)

where

 Z_{GT}' = adjusted group tear-out capacity


Z_{RT-1}' = adjusted row tear-out capacity of row 1 of fasteners bounding the critical group area

Z_{RT-n}' = adjusted row tear-out capacity of row n of fasteners bounding the critical group area

A_{group-net} = critical group net section area between row 1 and row n

E.4.1 For groups of fasteners with non-uniform spacing between rows of fasteners various definitions of critical group area should be checked for group tear-out in combination with row tear-out to determine the adjusted capacity of the critical section.

Figure E1 Staggered Rows of Bolts

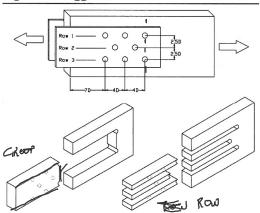

Appendix E

• Appendix E NDS Expressions

3 failure modes


- Net tension:

$$Z'_{NT} = \underbrace{F_t^{l}}_{A_{net}} A_{net}$$

- Row tear-out:


$$Z'_{RT_i} = \underbrace{n_i F_i t s'_{\min}}_{T}$$


$$Z'_{RT} = \sum_{i=1}^{n_{\text{row}}} Z'_{RT_i}$$

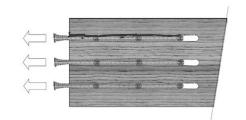

- Group tear-out

$$Z'_{GT} = \frac{Z'_{RT-top}}{2} + \frac{Z'_{RT-bottom}}{2} + F'_{t}A_{group-net}$$

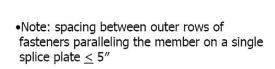

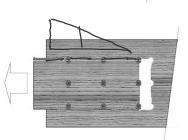

Peter von Buelow


University of Michigan, TCAUP

Slide 23 of 56

Chapter 12

Connection Yield Modes


Yield Limit Equations for Dowel Fasteners Table 12.3.1A

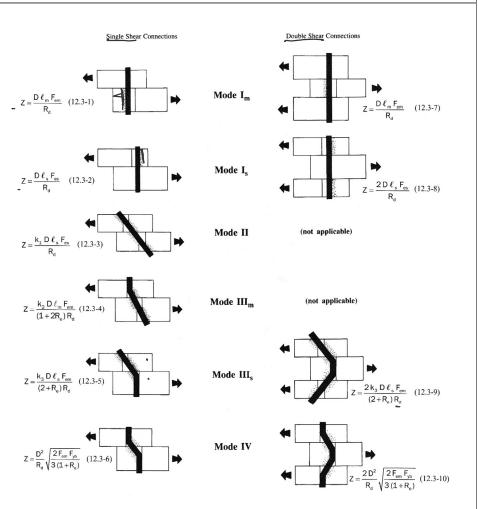

NDS Appendix E tension connection – 2x12's So.Pine No.2 $C_D = 1.25$

lap splice connection example - 1" bolts w/ 1-1/16" holes

BOLTED SPLICE - LOCAL STRESSES

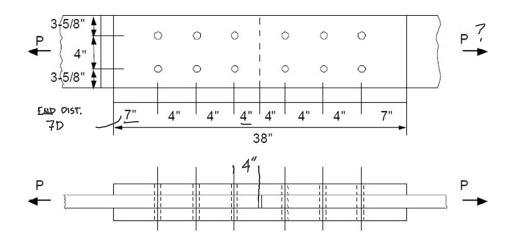

Peter von Buelow Slide 25 of 56 University of Michigan, TCAUP

NDS Appendix E

tension connection – 2x12's So.Pine No.2 $C_D = 1.25$

net tension check

EXAMPLE: BOLTED SPLICE - LOCAL STRESSES

•Assume 1" diameter x 5" long bolts

•2x12 No. 2 Southern Pine main and side members

Net Section Tension Check

$$Z_{NT}' = F_{t}' A_{net}$$
 when
$$F_{t}' = 450(1.25) = 562.5 \text{ psi}$$

$$A_{net} = 13.7 \text{ in}^{2} = 16.33 - (2(1.0485 \times 1.5"))$$

$$Z_{-r'} = 7.706 \text{ lbs}$$

Note: hole size for net area includes 1/16" oversizing per NDS 12.1.3.2


E.2 Net Section Tension Capacity

The adjusted tension capacity is calculated in accordance with provisions of 3.1.2 and 3.8.1 as follows:

$$Z_{NT}' = \underline{F_t'} \underline{A_{net}}$$
 (E.2-1)

Z_{NT}' = adjusted tension capacity of net section area

Ft' = adjusted tension design value parallel to

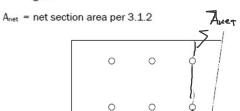

NDS Appendix E

tension connection – 2x12's So.Pine No.2 $C_D = 1.25$

row tear-out check

EXAMPLE: BOLTED SPLICE - LOCAL STRESSES

Row Tear-Out Check

$$Z_{RTi}' = n_i F_v'(t s_{critical})$$
 $n_i = 3$
 $F_v' = 175(1.25) = 219 \text{ psi}$

$$n_i = 3$$

$$F_{v}' = 175(1.25) = 219 \text{ psi}$$

$$t = 1.5'$$

$$t = 1.5''$$

$$s_{critical} = 4''$$

 $Z_{RTi}' = 3,938$ lbs for one row

$$Z_{RT}' = 7,875$$
 lbs for two rows

Note: s_{critical} is the minimum of the end distance and the in-row bolt spacing = 4''




The adjusted tear-out capacity of a row of fasteners can be estimated as follows:

$$Z_{RTI}' = \eta_i \frac{F_v' A_{critical}}{2}$$
 (E.3-1)

$$Z_{RTI}' = \frac{F_v't}{2} [n_i s_{critical}] (2 shear lines)$$
 (E.3-2)



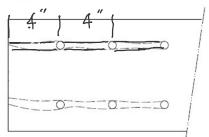

Peter von Buelow

University of Michigan, TCAUP

Slide 27 of 56

Slide 28 of 56

NDS Appendix E

tension connection – 2x12's So.Pine No.2 $C_D = 1.25$

group tear-out check $A_{qroup-net} = (4 - 1 1/16) 1.5 = 4.406 in^2$

EXAMPLE: BOLTED SPLICE – LOCAL STRESSES

Group Tear-Out Check

$$Z_{GT}' = Z_{RT1}'/2 + Z_{RT2}'/2 + F_t' A_{group-net}$$

$$Z_{RT1}' = Z_{RT2}' = 3,938 \text{ lbs}$$

$$F_t' = 450(1.25) = 562.5 \text{ psi}$$


$$A_{group-net} = 4.41 in^2$$

$$Z_{GT}' = 6,418 \text{ lbs}$$

Note: hole size for net area includes 1/16" oversizing per NDS 12.1.3.2

E.4 Group Tear-Out Capacity


The adjusted tear-out capacity of a group of "n" rows of fasteners can be estimated as:

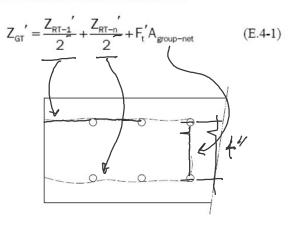

Chapter 12

Connection Yield Modes

Yield Limit Equations for Dowel Fasteners Table 12.3.1A

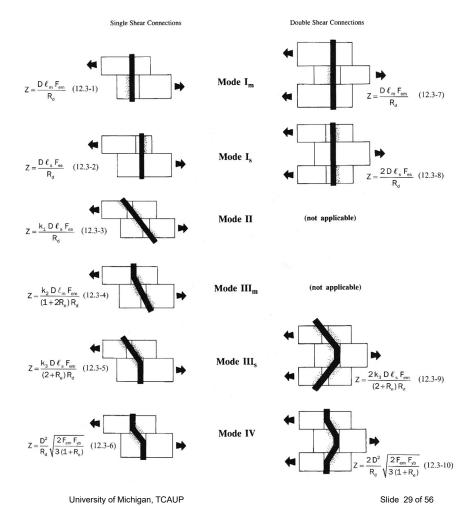

NDS Appendix E

Peter von Buelow

tension connection – 2x12's So.Pine No.2 $C_D = 1.25$ fastener yield limit equations

idotorior yrord iirint oqt				
D = 1 IN Boca	Table 12.3.1	A Yield Limit Equations		
Fyb = <u>45</u> 000 PSI	Yield Mode	Single Shear		Double Shear
Rd (Table 12.3.1B) 4	I_{m}	$Z = \frac{D \ell_m F_{em}}{R_d}$	(12.3-1)	$Z = \frac{D \ell_m F_{em}}{R_d} = 2306 LBS $ (12.3-7)
Re = 1 Rt = 1	I_{s}	$Z = \frac{D \ell_s F_{es}}{R_d}$	(12.3-2)	$Z = \frac{2 D \ell_s F_{es}}{R_d} = 4613 LBS(12.3-8)$
<u>L</u> m = 1.5 IN	п	$Z = \frac{k_1 D \ell_s F_{es}}{R_d}$	(12.3-3)	
Ls_= 1.5 IN <u>Fe</u> m = 6150 PSI	${ m III_m}$	$Z = \frac{k_2 D \ell_m F_{em}}{(1 + 2R_e) R_d}$	(12.3-4)	
Fes = 6150 PSI	III_{s}	$Z = \frac{K_3 D \ell_s F_{em}}{(2 + R_e) R_d}$	(12.3-5)	$Z = \frac{(k) D \ell_s F_{em}}{(2 + \beta E_s) B_d} = \frac{4307 LB(12.3-9)}{(12.3-9)}$
k3 = 2.241	IV	$Z = \frac{D^2}{R_d} \sqrt{\frac{2 F_{em} F_{yb}}{3 (1 + R_e)}}$	(12.3-6)	$Z = \frac{2D^2}{R_d} \sqrt{\frac{2F_{em}F_{yb}}{3(1+R_1^2)}} = \frac{6003 \text{ LBS}}{(12.3-10)}$
$Z = \underline{2306} \text{ LBS (least)}$	Notes:			D = diameter, in. (see 12.3.7)
adjustment factors:	$k_1 = \frac{\sqrt{R_e + 2R_e}}{}$	$(1+R_t+R_t^2)+R_t^2R_e^3-R_e(1+R_e)$	(t)	ryb = dowel bending yield strength, psi R _d = reduction term (see Table 12.3.1B)
$C_D = 1.25$			$\vec{\exists}$	$P_{e} = P_{em}/P_{es}$ $P_{e} = \overline{\ell_{m}}/\ell_{s}$
$C_{g} = 0.97$	$k_2 = -1 + \sqrt{2(1 + 1)^2}$	$+R_e) + \frac{2F_{yb}(1+2R_e)D^2}{3F_{em}\ell_m^2}$		$\ell_{\rm m} = {\rm main}$ member dowel bearing length, in. $\ell_{\rm s} = {\rm side}$ member dowel bearing length, in.
$\overline{\underline{C}_{\Delta}} = 0.571 \ 4''$	2(1+	R_{e} + $\frac{2F_{yb}(2+R_{e})D^{2}}{}$		F _{em} = main member dowel bearing strength, psi (see Table
$C_M = Ct = 1.0$	K ₃ J −1 + √ R	sF _{em} ℓ _s ²		F _{es} = side member dowel bearing strength, psi (see Table 12.3.3)

Z' = 1598 lb/ bolt = **9589 LBS total**

NDS Appendix E

tension connection – 2x12's So.Pine No.2 fastener yield limit equations

D = 1 IN

Fyb = 45000 PSI

Rd (Table 12.3.1B) 4

Re = 1

Rt = 1

Lm = 1.5 IN

Ls = 1.5 IN

Fem = 6150 PSI

Fes = 6150 PSI

k3 = 2.241

Z = 2306 LBS (least)

adjustment factors:

 $C_D = 1.25$

 $C_a = 0.97$ (calculated) 0.99 (table)

 $C_{\Lambda} = 0.571$

 $C_{M} = Ct = 1.0$

Z' = 1598 lb/ bolt = **9589 LBS total**

11.3.6 Group Action Factors, Cg

11.3.6.1 Reference lateral design values for split ring connectors, shear plate connectors, or dowel-type fasteners with $D \le 1$ " in a row shall be multiplied by the following group action factor, C_g:

$$\frac{C_g}{n} = \left| \frac{m(1 - m^{2n})}{n \left[(1 + R_{EA} m^n)(1 + m) - 1 + m^{2n} \right]} \right| \left[\frac{1 + R_{EA}}{1 - m} \right]$$
 (11.3-1)

Group Action Factors, $\mathbf{C}_{\mathbf{g}'}$ for Bolt or Lag Screw Connections with Table 11.3.6A Wood Side Members²

			Fo	$\mathbf{r} \mathbf{D} = 1$	1'', s =	4", E =	1,400,0	000 psi				
A_s/A_m^{-1}	$\frac{A_{\rm s}^1}{{\rm in.}^2}$		_		Nu	mber o	f fasten	ers in a	row			
_ ~	in.2	2	(3)	4	5	6	7	8	9	10	11	12
0.5	5	0.98	0.92	0.84	0.75	0.68	0.61	0.55	0.50	0.45	0.41	0.38
	12	0.99	0.96	0.92	0.87	0.81	0.76	0.70	0.65	0.61	0.57	0.53
	20	0.99	0.98	0.95	0.91	0.87	0.83	0.78	0.74	0.70	0.66	0.62
	28	1.00	0.98	0.96	0.93	0.90	0.87	0.83	0.79	0.76	0.72	0.69
	40	1.00	0.99	0.97	0.95	0.93	0.90	0.87	0.84	0.81	0.78	0.75
_	64	1.00	0.99	0.98	0.97	0.95	0.93	0.91	0.89	0.87	0.84	0.82
	5	1.00	0.97	0.91	0.85	0.78	0.71	0.64	0.59	0.54	0.49	0.45
	12	1.00	0.99	0.96	0.93	0.88	0.84	0.79	0.74	0.70	0.65	0.61
33 —	20	1.00	0.99	0.98	0.95	0.92	0.89	0.86	0.82	0.78	0.75	0.71
	28	1.00	0.99	0.98	0.97	0.94	0.92	0.89	0.86	0.83	0.80	0.77
	40	1.00	1.00	0.99	0.98	0.96	0.94	0.92	0.90	0.87	0.85	0.82
	64	1.00	1.00	0.99	0.98	0.97	0.96	0.95	0.93	0.91	0.90	0.88

1. Where $A_a/A_m > 1.0$, use A_m/A_s and use A_m instead of A_s . 2. Tabulated group action factors (C_g) are conservative for D < 1", s < 4", or E > 1,400,000 psi.

University of Michigan, TCAUP

Slide 31 of 56

NDS Appendix E

tension connection – 2x12's So. Pine No.2 $C_D = 1.25$

D = 1 IN

Fvb = 45000 PSI

Rd (Table 12.3.1B) 4

Re = 1

Rt = 1

Lm = 1.5 IN

Ls = 1.5 IN

Fem = 6150 PSI

Fes = 6150 PSI

k3 = 2.241

Z = 2306 LBS (least)

adjustment factors:

 $C_D = 1.25$

 $C_0 = 0.97$

 $C_{\Lambda} = 0.571 =$ $C_{M} = Ct = 1.0$

Peter von Buelow

Z (adj. factors) = Z

Z' = 1598 lb/ bolt = 9589 LBS total



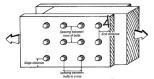


Table 12.5.1A	nd Distance R	tequirements
	End D	istances
Direction of Loading	Minimum end distance for $C_{\Delta} = 0.5$	Minimum end distance for $C_{\Delta} = 1.0$
Perpendicular to Grain	2D	4D
Parallel to Grain, Compression: (fastener bearing away		
from member end)	2D	4D
Parallel to Grain, Tension: (fastener bearing to-	2 00	2"
ward member end)	3.5	*
for coffmonds	2 SD	710

(b) For loading at an angle to the fastener, where dowel-type fasteners are used, the minimum shear area for $C_{\Delta} = 1.0$ shall be equivalent to the shear area for a parallel member connection with minimum end distance for $C_{\Delta} = 1.0$ (see Table 12.5.1A and Figure 12E). The minimum shear area for $C_{\Delta} = 0.5$ shall be equivalent to $\frac{1}{2}$ the minimum shear area for $C_{\Delta} = 1.0$ Where the actual shear area is greater than or equal to the minimum shear area for $C_{\Delta} = 0.5$, but less than the minimum shear area for $C_{\Delta} = 0.5$ 1.0, the geometry factor, C_∆, shall be determined as follows:

2.5D

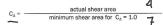

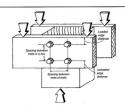

(c) Where the actual spacing between dowel-type fasteners in a row for parallel or perpendicular to grain loading is greater than or equal to the minimum spacing (see Table 12.5.1B), but less than the minimum spacing for $C_{\Delta} = 1.0$, the geometry factor, C_{Δ} , shall be determined as follows:

$$C_{\Delta} = \frac{\text{actual spacing}}{\text{minimum spacing for } C_{\Delta} = 1.0}$$


12.5.1.3 Where D ≥ 1/4", edge distance and spacing between rows of fasteners shall be in accordance with Table 12.5.1C and Table 12.5.1D and applicable requirements of 12.1. The perpendicular to grain distance between the outermost fasteners shall not exceed 5" (see Figure 12H) unless special detailing is provided to accommodate cross-grain shrinkage of the wood member. For structural glued laminated timber members, the perpendicular to grain distance between the outermost fasteners shall not exceed the limits in Table 12.5.1F, unless special detailing is provided to ac-

commodate cross-grain shrinkage of the member.

12.5.1.4 Where fasteners are installed in the narrow edge of cross-laminated timber panels and $D \geq 1/4\text{"},$ end distances, edge distances, and fastener spacing in a row shall not be less than the minimum values in Table 12.5.1G.


Table 12.5.1B Spacing Requirements for

	astellers ill a now			
Direction of Loading	Spacing			
	Minimum spacing	Minimum spacing for $C_{\Delta} = 1.0$		
Parallel to Grain	3D	4D		
Perpendicular to Grain	3D	Required spacing for attached members		

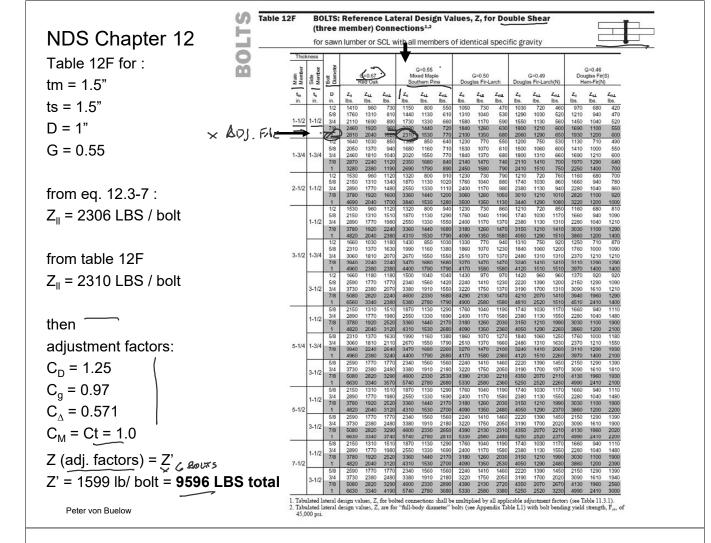

NDS Appendix E 3-member connection – 2x12's So.Pine No.2 C_D = 1.25 results


EXAMPLE: BOLTED SPLICE - LOCAL STRESSES

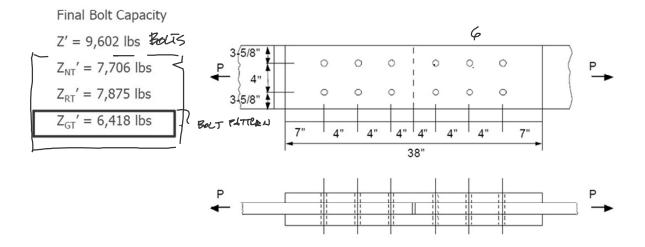

Avoid tension perpendicular to grain


Situations

- notches
- large diameter fasteners
- hanging loads

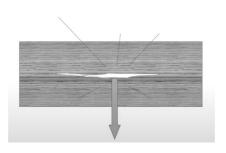


NOTCHING

Problem

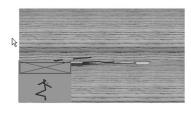



Solution

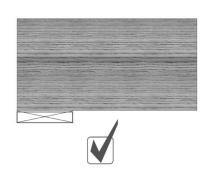


Peter von Buelow University of Michigan, TCAUP Slide 35 of 56

Connection Details

Notches


BEAM TO CONCRETE

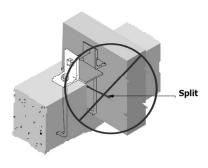

Notched Beam Bearing

- may cause splitting
- not recommended



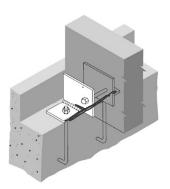


Bearing Wall

· alternate to beam notch




Hangers

HANGER TO BEAM

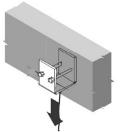




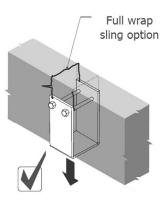


Load suspended from lower half of beam

- · Tension perpendicular to grain
- May cause splits

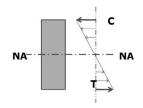

Load supported in upper half of beam

· Above the neutral axis

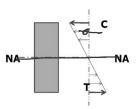


Peter von Buelow University of Michigan, TCAUP Slide 37 of 56


Connection Details

exposure to moisture

- end grain wicks water
- natural decay resistant species - e.g. cedar
- treated lumber

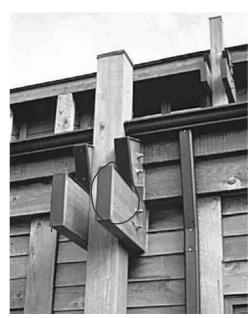



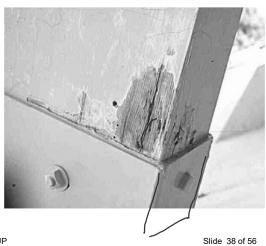


University of Michigan, TCAUP Peter von Buelow

BEAM TO COLUMN

splitting due to shrinkage


Full-depth side plates

- · may cause splitting
- wood shrinkage

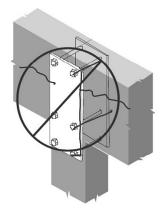

Smaller side plates

- · transmit force
- · allow wood movement

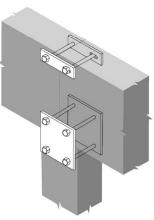

Peter von Buelow University of Michigan, TCAUP Slide 39 of 56


Connection Details

water damage shrinkage splitting



Solutions

- connectors at base
- slotted connectors

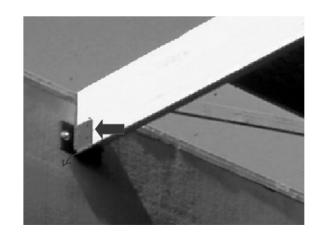




Water damage

- avoid contact with concrete or masonry
- provide ½" air gap
- provide weep holes



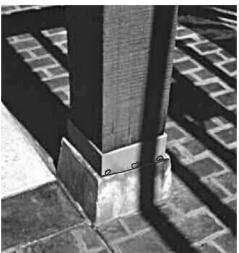


Peter von Buelow University of Michigan, TCAUP Slide 41 of 56


Connection Details


Water damage

- avoid contact with concrete or masonry
- provide ½" air gap
- provide weep holes

BEAM TO CONCRETE

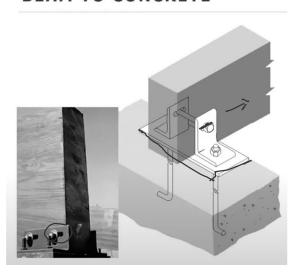

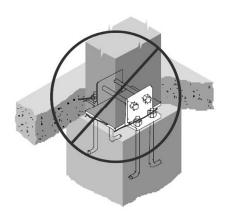


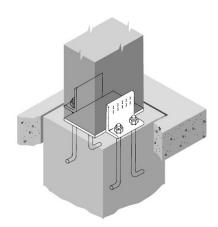


Peter von Buelow University of Michigan, TCAUP Slide 42 of 56

Seismic forces

diaphragm connections to walls

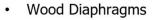

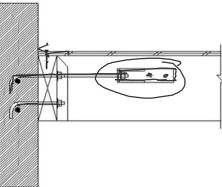



Peter von Buelow University of Michigan, TCAUP Slide 43 of 56


Connection Details

Seismic forces

shear walls


SHEAR WALL - PARTS

Five parts of a shear wall

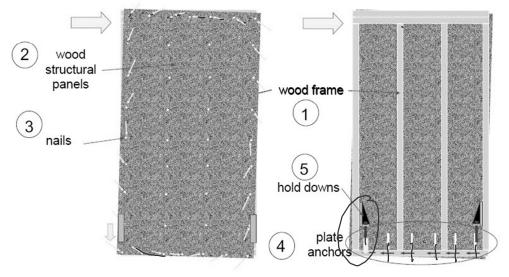

Seismic forces

shear walls

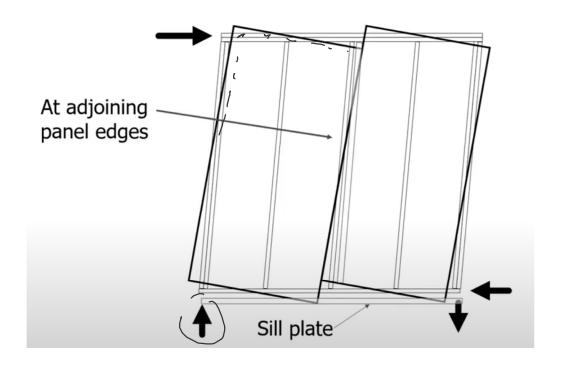

Peter von Buelow University of Michigan, TCAUP Slide 45 of 56


Connection Details


STAGGERED NAILING

Seismic forces

shear walls



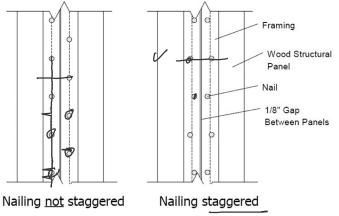

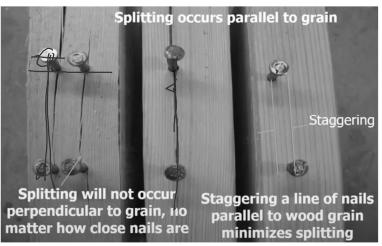

Seismic forces

shear walls



3X AT ADJOINING PANEL EDGE



Section <u>4.3.7.1(4)</u>. 3x framing also required at adjoining panel edges where:

- Nail spacing of <u>2 in</u>. o.c.
- 10d common nails having penetration of more than 1-1/2 in. at 3 in. o.c. or less
- Nominal unit shear capacity on either side exceeds 700 plf in SDC D, E, or F

Exception: (2) 2x framing permitted in lieu of (1) 3x where fastened in accordance with the NDS to transfer the induced shear between members.




Peter von Buelow University of Michigan, TCAUP Slide 47 of 56

Connection Details

Seismic forces

shear walls

CH. 4 - SHEAR WALLS SHEATHED ON 2 SIDES

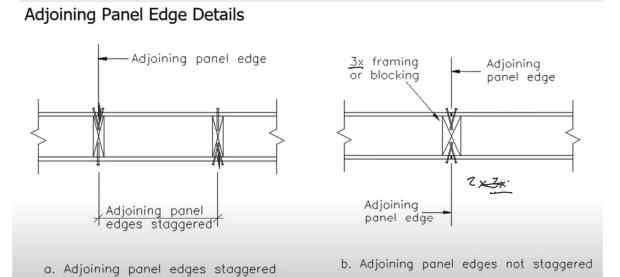


What's Better 2X6 Walls or 2X4 Walls?


Peter von Buelow University of Michigan, TCAUP Slide 49 of 56

Residential Details IRC & IBC

Floor

Floor

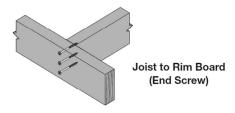

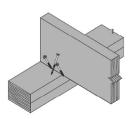


Joist to Sill or Girder (Toe Screw)

Connection Application	Fastener Quantities			
	IRC		IBC	
	Nails per Table R602.3 (1)	Equivalent SDWS Framing Screws	Nails per Table 2304.10.1	Equivalent SDWS Framing Screws
Joist to band joist (end screw)	(3) 16d common end nail	(3) SDWS16300	(3) 16d common	(3) SDWS16300
Joist to sill or girder (toe screw)	(3) 8d box	(3) SDWS16212	(3) 8d common	(3) SDWS16212

Residential Details IRC & IBC

Beams

Beam

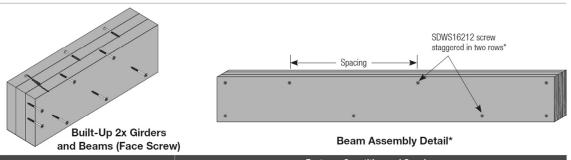

Connection Application	Fastener Quantities and Spacing			
	IRC		IBC	
	Nails per Table R602.3 (1)	Equivalent SDWS Framing Screws	Nails per Table 2304.10.1	Equivalent SDWS Framing Screws
Built-up 2x girders and beams (face screw)	10d box 32" o.c. (24" o.c. per 2015)	SDWS16212 32" o.c.	10d box 24" o.c.	SDWS16212 24" o.c.


*Fastening pattern shown applies to each ply of the built-up 2x beam.

Peter von Buelow University of Michigan, TCAUP Slide 51 of 56


Residential Details IRC & IBC

Walls


Walls

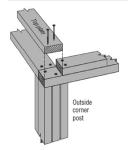



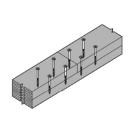

Double Top Plate Laps (Face Screw)

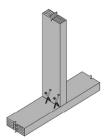

Stud to Sole Plate (Toe Screw)




Top or Sole Plate to Stud (End Screw)

	Fastener Quantities			
Connection Application	IRC		IBC	
	Nails per Table R602.3 (1)	Equivalent SDWS Framing Screws	Nails per Table 2304.10.1	Equivalent SDWS Framing Screws
Top or sole plate to stud (end screw)	(2) 16d box	(2) SDWS16212	(2) 16d common	(2) SDWS16300
Stud to sole plate (toe screw)	(2) 16d box	(2) SDWS16212	(4) 8d common	(4) SDWS16212
Double top plate laps (face screw)	(8) 16d box	(8) SDWS16212	(8) 16d common	(8) SDWS16300
Double top plate at corners and intersections (face screw)	(2) 10d box	(2) SDWS16212	(2) 16d common	(2) SDWS16212
Double studs (face screw)	10d box 24" o.c.	SDWS16212 24" o.c.	16d box 24" o.c.	SDWS16300 24" o.c.

Residential Details IRC & IBC

Ceiling


Ceiling

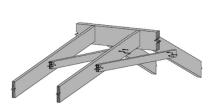






Ceiling Joist to Plate (Toe Screw)

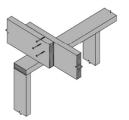

Ceiling Joist, Laps Over Partitions (Face Screw)

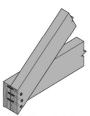

Ceiling Joist to Parallel Rafter (Face Screw)

Connection Application	Fastener Quantities			
	IRC		IBC	
	Nails per Table R602.3 (1) and R802.5.2	Equivalent SDWS Framing Screws	Nails per Table 2304.10.1	Equivalent SDWS Framing Screws
Ceiling joist to plate (toe screw)	(3) 8d box	(3) SDWS16212	(3) 8d common	(3) SDWS16212
Ceiling joists, lap over partitions (face screw)	(3 min*) 10d box	(3 min*) SDWS16212	(3 min*) 16d common	(3 min*) SDWS16300
Collar tie to rafter (face screw)	(3) 10d box	(3) SDWS16212	(3) 10d common	(3) SDWS16300
Ceiling joist to parallel rafters (face screw)	(3) 16d common*	(3) SDWS16300*	(3 min*) 16d common	(3 min*) SDWS16300

^{*}Quantities vary based on project conditions. The SDWS16300 is a 1-for-1 replacement for 16d common nails.


Peter von Buelow University of Michigan, TCAUP Slide 53 of 56

Residential Details IRC & IBC


Roof



Jack Rafter to Hip (Toe Screw)

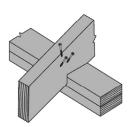

Roof Rafter to Plate (Toe Screw)

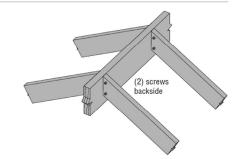

Roof Rafter to 2x Ridge Board (Toe Screw)

Connection Application	Fastener Quantities			
	IRC		IBC	
	Nails per Table R602.3 (1)	Equivalent SDWS Framing Screws	Nails per Table 2304.10.1	Equivalent SDWS Framing Screws
Roof rafter to plate (toe screw)	(3) 10d common	(3) SDWS16212	(3) 8d common	(3) SDWS16212
Roof rafter to 2x ridge board (toe screw)	(4) 16d box	(4) SDWS16212	(2) 16d common	(2) SDWS16300
Jack rafter to hip (toe screw)	(4) 16d box	(4) SDWS16212	(3) 10d common	(3) SDWS16300

Simpson Strong-Tie Connectors



Peter von Buelow University of Michigan, TCAUP Slide 55 of 56

Framing Details

